

# Table of Contents

<b>Garmin Nuvi 660</b> .....	2
<i>Как открыть корпус</i> .....	2

# Garmin Nuvi 660

## Как открыть корпус

Flip up your antenna, at the very top you will see two screws, (These are T-5 Torx) remove them. Next be very careful when you open the top cover! The ribbon cable for the antenna comes through the bottom corner (I think it is on the right looking at the unit.) Next focus on the left bottom corner, there is a black barrel that holds the antenna to the unit and also provides the clicking steps you get when positioning the antenna. There should be a slit for a screw driver inboard about 3MM Put your screw driver there and pull to the right. Now you can lift the antenna box free. (NOT THE ENTIRE UNIT, THE RIBBON CABLE IS STILL ATTACHED.) Now at the top of the unit you will see two more T-5's under the antenna pivot area. You should be able to pry the unit open once these are removed. Still you must be careful the touch panel, speaker cable, power cable and one more cable is still attached. That one more cable you will see right away, it is red and black and you can remove it and fold the two halves over with the others still attached. After removing the final three which are all ribbon cables. Also don't forget the antenna cable which once removed can be pulled through the half of the unit it is attached to. After separating the halves you have the touch screen removed. You have two more phillips screws which removes the "motherboard so to speak." Hope this helps you peace.

- Открыть антенну, на самом верху антенны есть два шурупчика под отвёртку T-5 Torx, открутить их.
- Будь очень аккуратен, когда будешь открывать верхнюю крышку!

From:

<https://kibi.ru/> - **КибИ.ру**

Permanent link:

[https://kibi.ru/notes/garmin\\_nuvi\\_660?rev=1232029500](https://kibi.ru/notes/garmin_nuvi_660?rev=1232029500)

Last update: **2010/10/10 22:50**

